

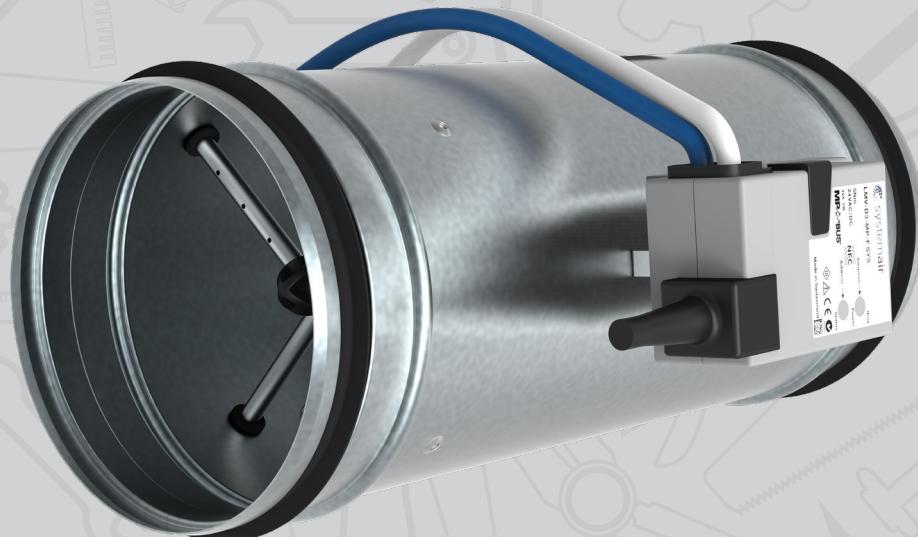
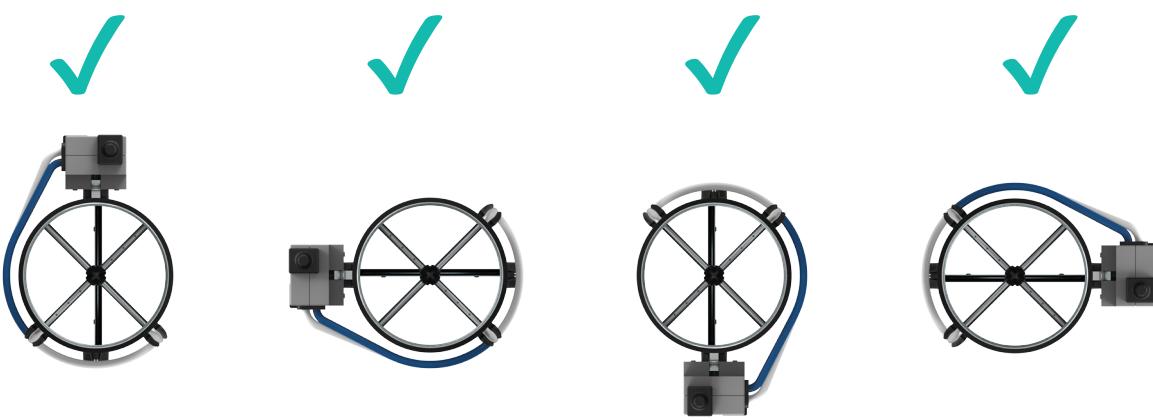


OPTIMA-R

Installations-, Wartungs- und Betriebsanleitung

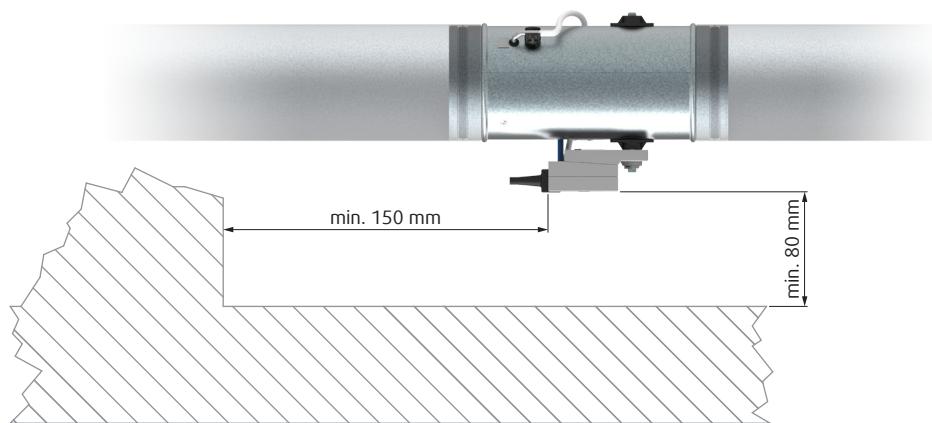

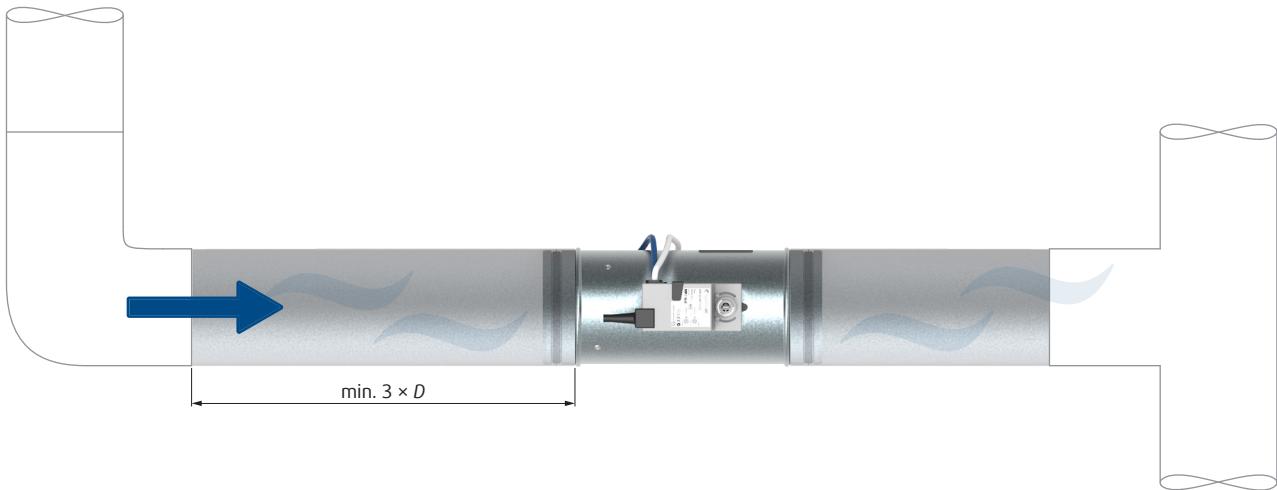

OPTIMA-R...

- BLC1


- BLC1MOD

- GO

- BLC4

- BLC1KNX

- GOMOD

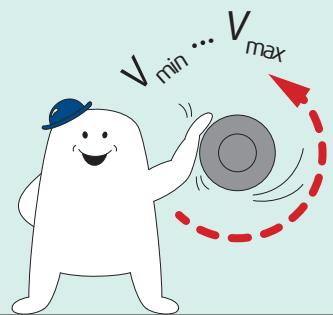

- BLC1


- BLC4

- BLC1MOD

- BLC1KNX



- BLC1

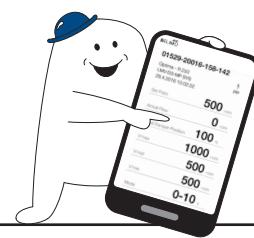

NFC

- BLC1MOD

- BLC1KNX


- GO

- GOMOD




- GO

- GOMOD

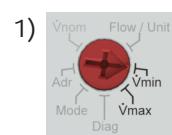







1)

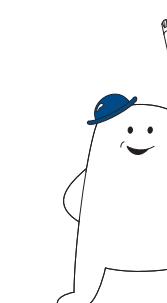

2)



OPTIMA-R... **- BLC1** **- BLC4** **- GO** **- GOMOD** (DC 0 V ... 10 V)

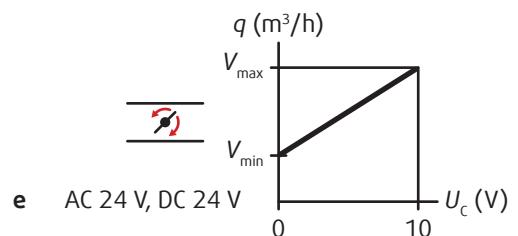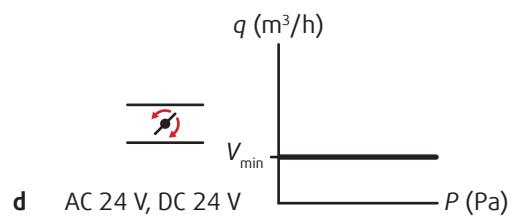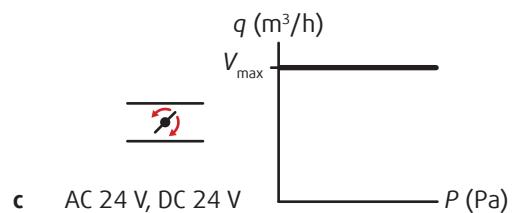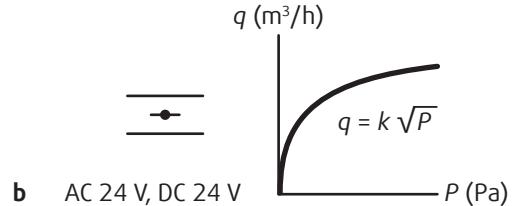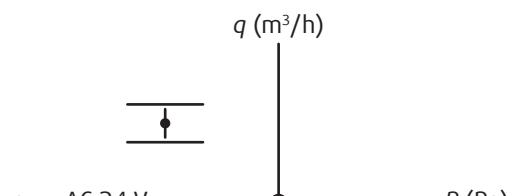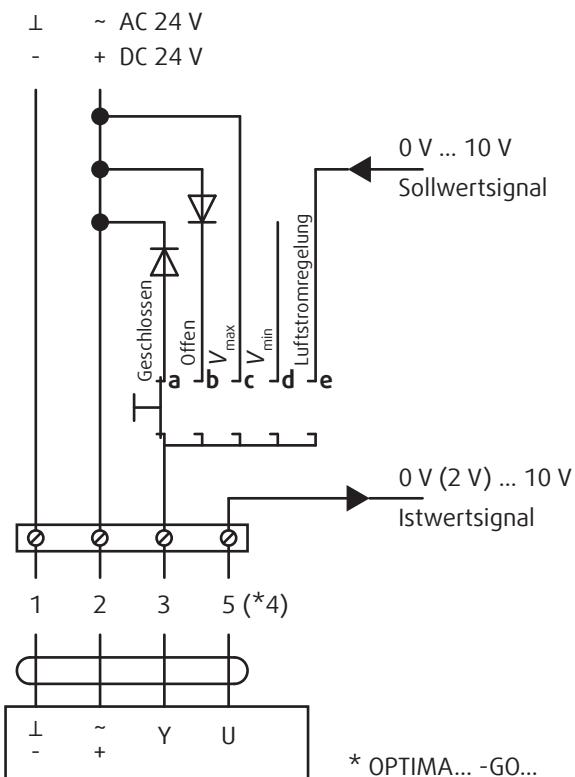


OPTIMA-R...

- BLC1






- BLC4


- GO

(DC 2 V ... 10 V)

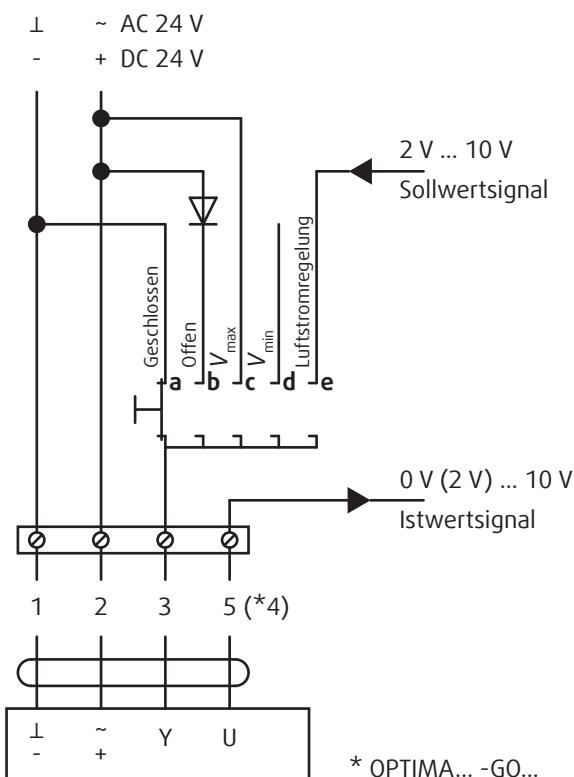

* OPTIMA... -GO...



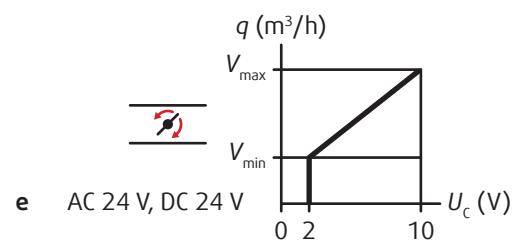
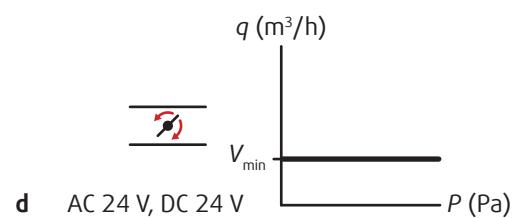
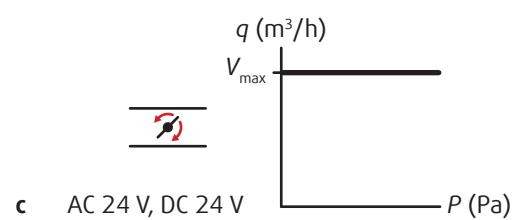
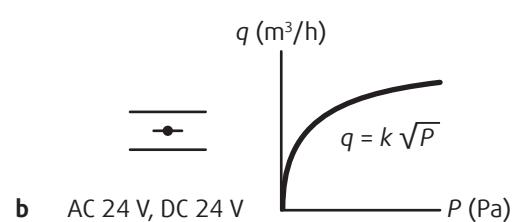
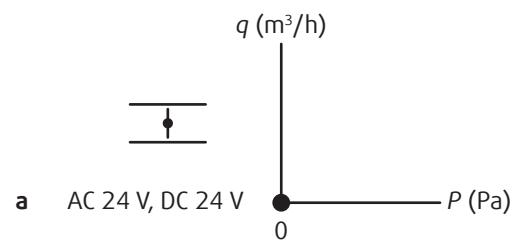




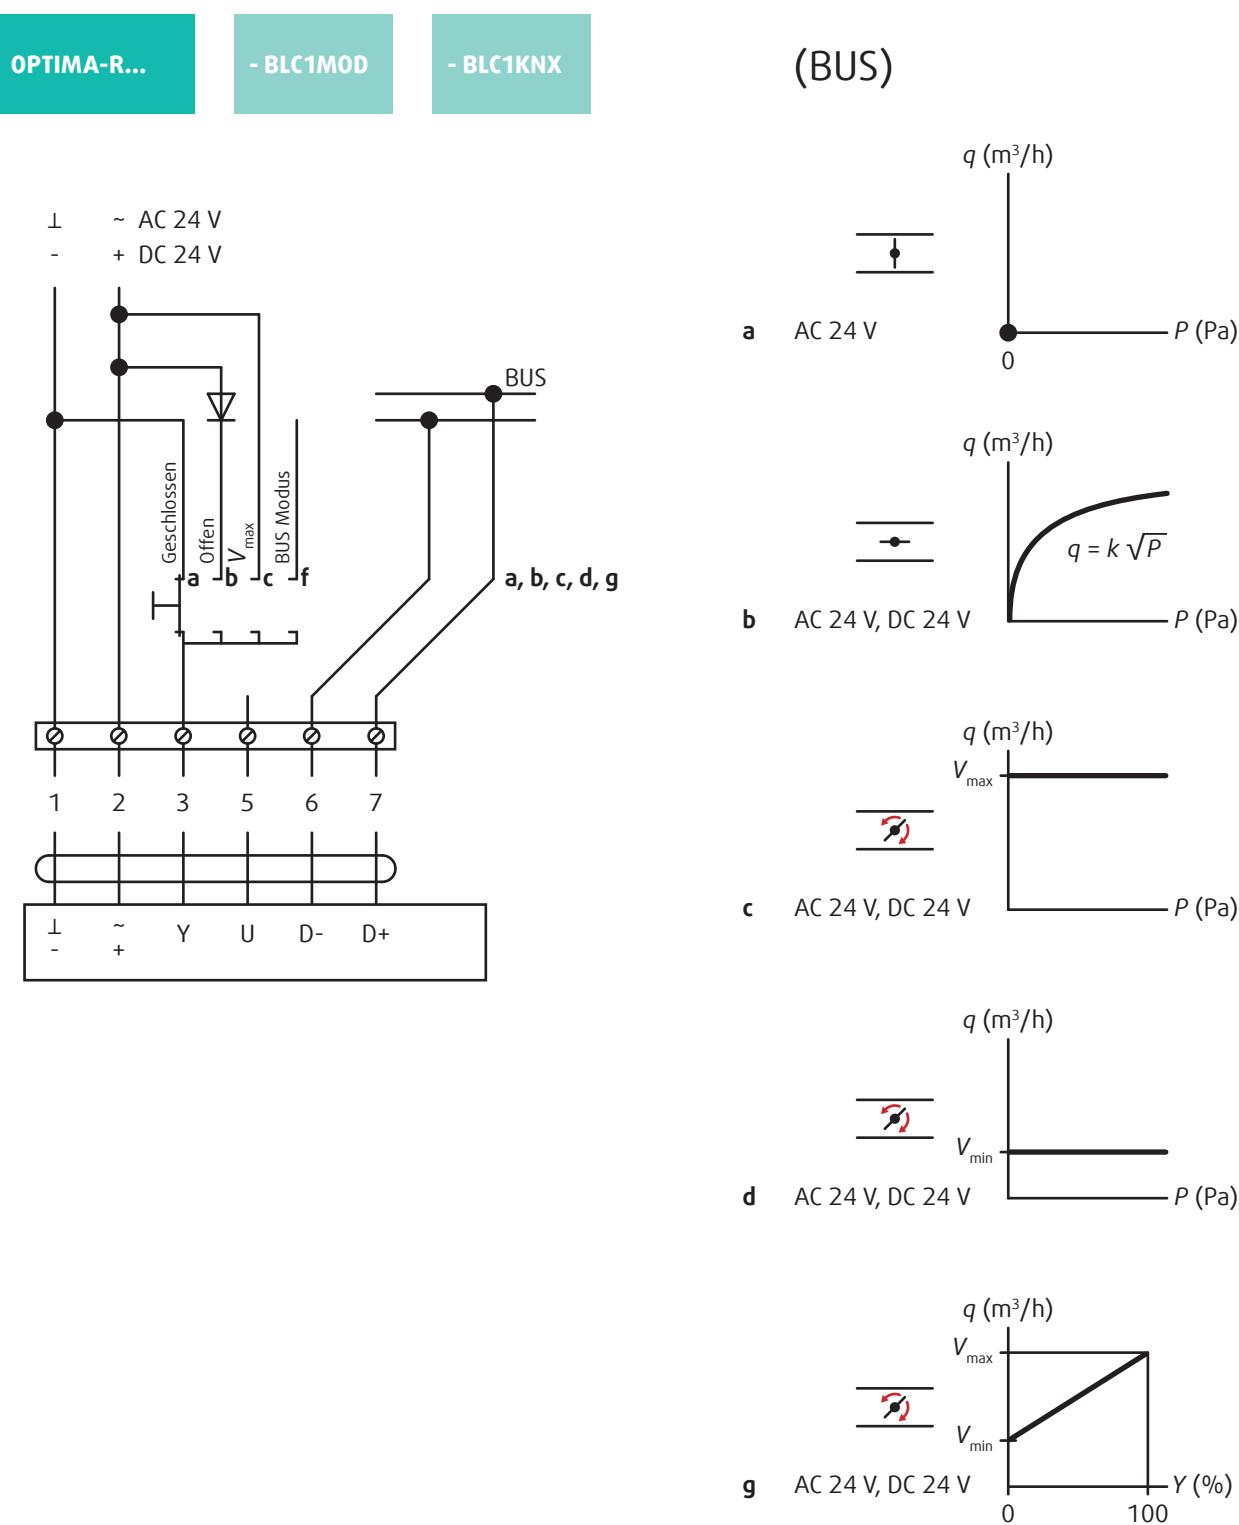


OPTIMA-R...


- GOMOD

(BUS / DC 2 V ... 10 V)

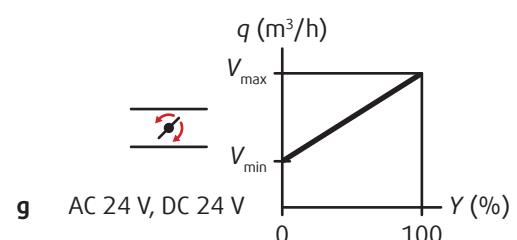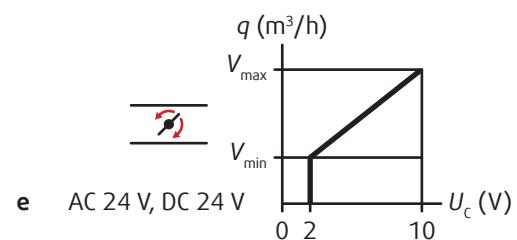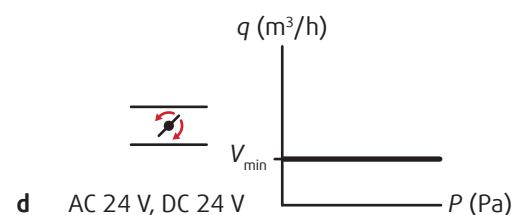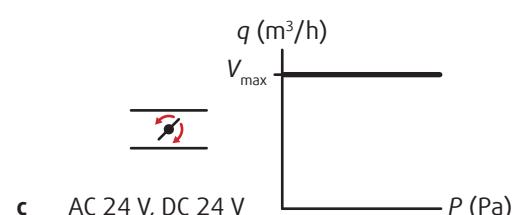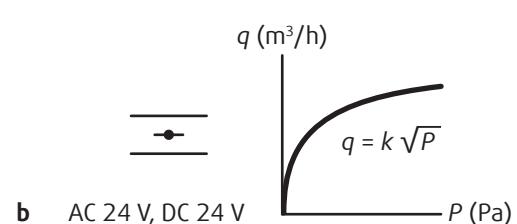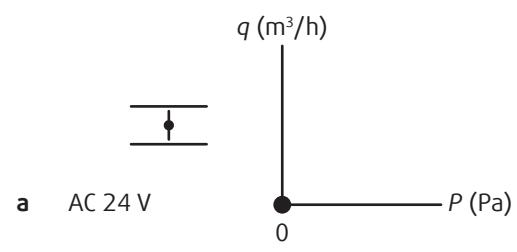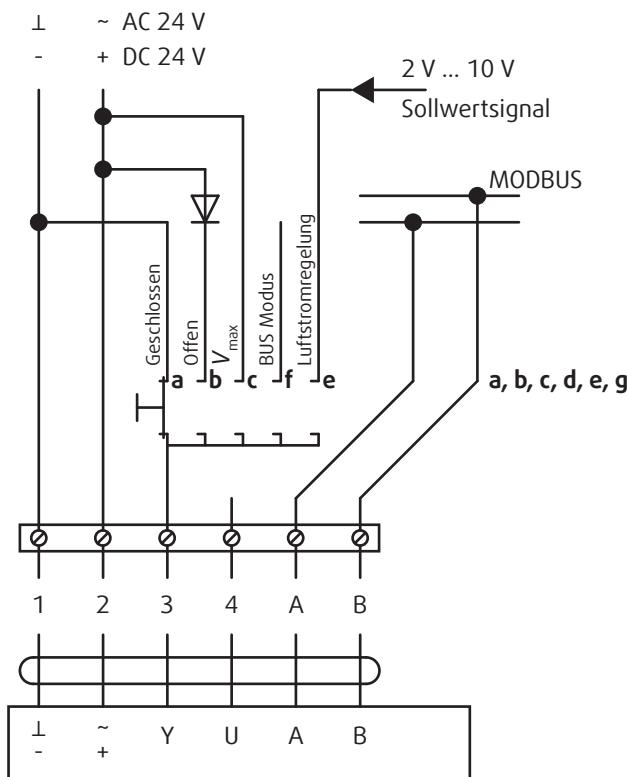


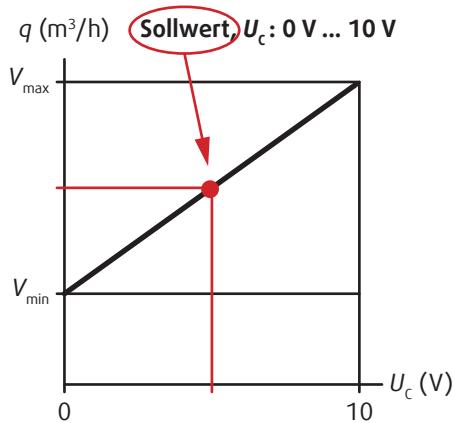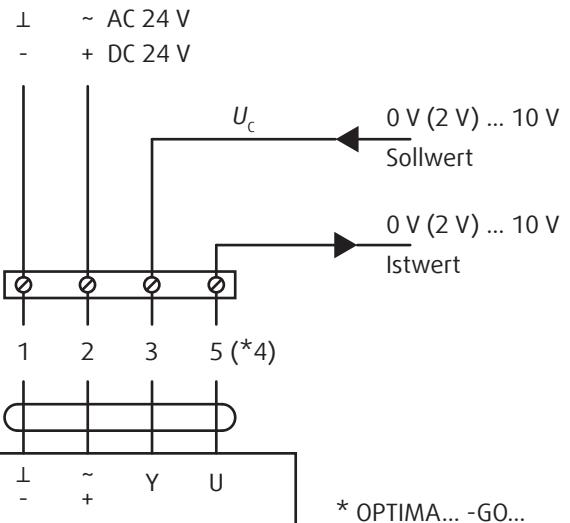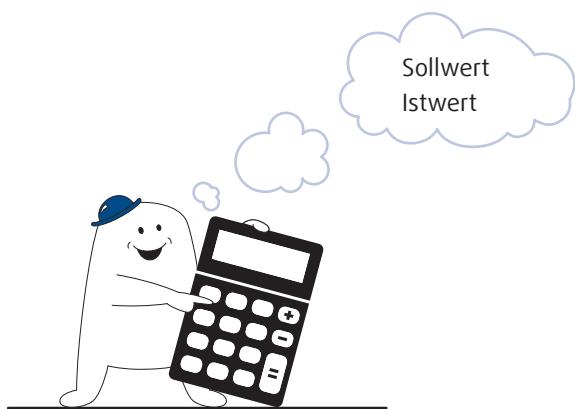


$$U_c = \frac{q - V_{\min}}{V_{\max} - V_{\min}} \cdot 10$$

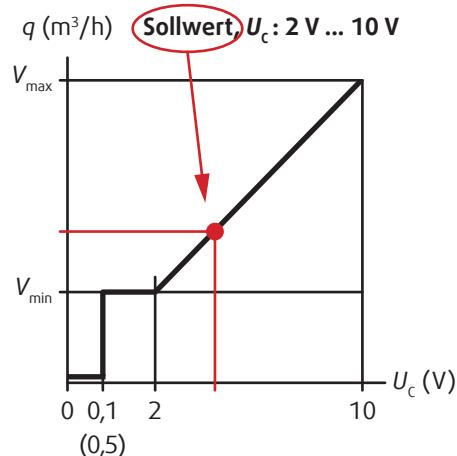

$$U_c = 2 + \frac{q - V_{\min}}{V_{\max} - V_{\min}} \cdot 8$$

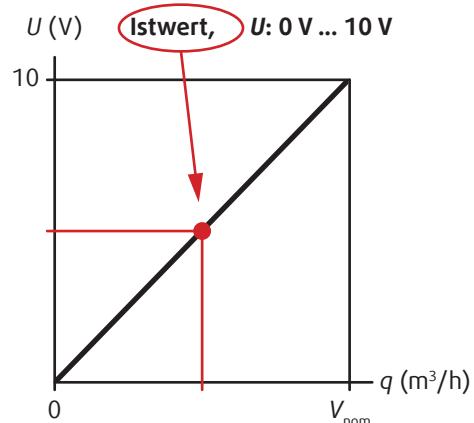

$$q = \frac{U}{10} \cdot V_{\text{nom}}$$

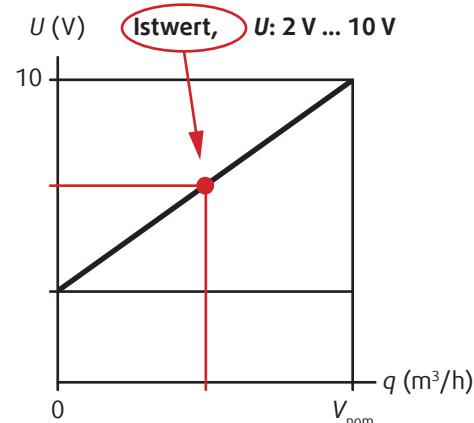

$$q = \frac{U - 2}{8} \cdot V_{\text{nom}}$$



www.systemair.de